

Apcolite Premium Emulsion Advanced

Apcolite Premium Emulsion Advanced with advanced stain guard makes wiping stains off walls an easy task, while maintaining long-lasting cleanliness. It also offers a soft sheen finish that enhances the overall appearance of your walls, giving them a smooth and elegant look.

DESCRIPTION

Anti-Fungal Shield

Apcolite Premium Emulsion Advanced protects your walls against harmful micro-organisms like fungus that can cause considerable damage. It helps maintain cleaner, healthier walls for longer periods.

Soft Sheen Finish

Offers a Soft Sheen finish to your walls a beautiful look. It enhances the overall appearance with a soft shine that reflects elegance and smooth finish.

Superior Cleanability

Apcolite Premium Emulsion Advanced washability feature offers superior cleanability ensuring your wall stay beautiful for long time. It allows easy removal of tough stains without damaging the paint finish.



WATER BASED
asianpaints

No Added Lead, Mercury, Arsenic & Chromium

Lead contents does not exceed 90 parts per million.

PRODUCT FEATURES

AVAILABLE PACKS



Shelf-life: 3 years from date of manufacture in original tightly closed containers kept away from direct sunlight and excessive heat.

COVERAGE

On normal masonry surface through roller application.



2 COATS
100-120sq.ft/ltr**

**Actual coverage may vary from the quoted coverage due to factors such as method and condition of application and surface roughness and porosity.

COLOURS AVAILABLE

**800 PLUS
SHADES***



*Currently available in more than 800 plus shades as per the Asian Paints Colour Spectra.

FINISH


MATT RICH MATT **SOFT SHEEN** HIGH SHEEN ULTRA SHEEN

✓ **SOFT SHEEN**

Refer to gloss levels in technical details

HOW TO APPLY

PRE PAINTING STEPS

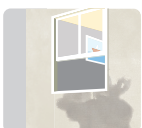

PLASTER New masonry surfaces must be allowed to cure completely. It is recommended to allow 3 months as the curing time for new masonry surfaces.



FILLING FOR CRACKS For filling cracks upto 5mm use Asian Paints Crack Seal.



CLEANING Surface should be free from any loose paint, dust or grease. Growths of fungus, algae or moss should be removed by wire brushing and water. In case of areas that have excessive dampness, correct it to limit further dampness. Bio block can be used for removing fungus, algae or moss. 2 coats of Smart Care Salt Clean can be used to remove efflorescence, followed by wet sponge mopping.



FILLING FOR HOLES & DENTS For larger dents/holes it is recommended to use cement and fine sand in the ratio 1:3, mixed with latex xtreme+, 7% by weight of cement.

RECOMMENDED APPLICATION

Apply 2 coats for light shades and 3 coats for dark shades.

APPLICATION	CODE	THINNER	DILUTION	RECOATING PERIOD
SAND THE SURFACE WITH EMERY PAPER 180 AND WIPE CLEAN				
USE DECOPRIME CEMENT PRIMER WHITE - WT	8360	WATER	50%-60%	4-6 HRS
OR				
ASIAN PAINTS ROYALE BASE COAT	8033	WATER	10%	4-6 HRS
ASIAN PAINTS ACRYLIC WALL PUTTY/ASIAN WALL PUTTY/SMARTCARE WATERPROOF WALL PUTTY	8753/8079/8077	WATER	AS REQD	6-8 HRS
SAND WITH EMERY PAPER 180 AND WIPE CLEAN				
ASIAN PAINTS ACRYLIC WALL PUTTY/ASIAN WALL PUTTY/SMARTCARE WATERPROOF WALL PUTTY	8753/8079/8077	WATER	AS REQD	6-8 HRS
SAND WITH EMERY PAPER 320 AND WIPE CLEAN				
USE DECOPRIME CEMENT PRIMER WHITE - WT	8360	WATER	50%-60%	4-6 HRS
OR				
ASIAN PAINTS ROYALE BASE COAT	8033	WATER	10%	4-6 HRS
SAND WITH EMERY PAPER 320 AND WIPE CLEAN				
APPLY 1 st COAT OF PREMIUM EMULSION ADVANCED	8030	WATER	25%-35%	4-6 HRS
SAND WITH EMERY PAPER 400 AND WIPE CLEAN				
APPLY 2 nd COAT OF PREMIUM EMULSION ADVANCED	8030	WATER	25%-35%	4-6 HRS

In case of surfaces which have dampness issues or chances of moisture ingress in future, it is highly recommended to use Smart Care Damp Block 2K (2-3 coats) before starting normal paint application.

*Dilution measured on volume basis. Recoat period is quoted for 25°C. And 50% relative humidity.

ADDITIONAL INFORMATION

PRECAUTIONS

- > Do not apply when ambient temperature is less than 10°C or if the temperature might drop to this level within 4 hrs of application.
- > Do not apply when humidity exceeds 85% or when it is raining outside.
- > Do not over-thin or over-extend the brush.
- > Tint using Asian Paints machine colorants only.
- > Stir well and strain before use.
- > Tinted paints need thorough shaking immediately after tinter addition as well as before use.

POST PAINTING CARE

- > The Golden rule for removing any wall stains is that one should remove it immediately. Remove all dirt using a clean cloth or duster. Always remove dirt from top to bottom, this helps in avoiding loose dirt to smudge the walls.
- > For regular household stains, use 5% mild soap/detergent solution only. Use a sponge to remove the stains.

TECHNICAL DETAILS

- Drying Time:**
Surface dry (touch dry) - 30 to 45 minutes.
- Sheen:**
8-12 units on glass plate at 60° angle.
- Stability of Thinned Paint:**
Use within 24 hrs.

SAFETY FEATURES

- > Kindly refer to the MSDS for Royale Luxury Matt Emulsion which gives detailed information on safety measures while handling the paint, which is available on request.
- > Store the container with the lid tightly closed in an upright position, in a cool, dry place.
- > Keep out of reach of children and away from eatables.
- > May be harmful if swallowed. In case of ingestion seek immediate medical attention.
- > Wear eye protection during application. In case of contact with eyes, rinse immediately with plenty of water and seek medical advice.
- > In case of skin contact immediately wash skin with soap and plenty of water. Get medical attention if irritation develops or persists.
- > Do not breathe vapor or spray. It is recommended to wear suitable nose pad during sanding and surface preparation to avoid dust inhalation.
- > Do not pour leftover paint down the drain or in water courses.
- > In the event of spills, contain spillage using sand.
- > No added Lead, Mercury, Arsenic or Chromium compounds.
- > Customers should consult a local recycling agency for proper disposal of paint/drum.
- > Ensure that the surface is dry. Surface Moisture (On moisture meter) is under 16%. In case it is higher, find out the source of water and address it before painting. Allow Undercoats to dry sufficiently before applying paint.
- > Ensure the paint is cured for 2 weeks under normal atmospheric conditions. (300C; 50-60% RH) prior cleaning stains.
- > Application of Acrylic Wall Putty/Asian Waterproof Putty and adherence to the painting system will be to best results.
- > Avoid use of Alkyd based primer with cement-based putty or filling compounds.



For enquiries, feedback and complaints, please call toll-free number 16600124680/9802033515 or write us at weassure@asianpaints.com.np